


Updating Displays

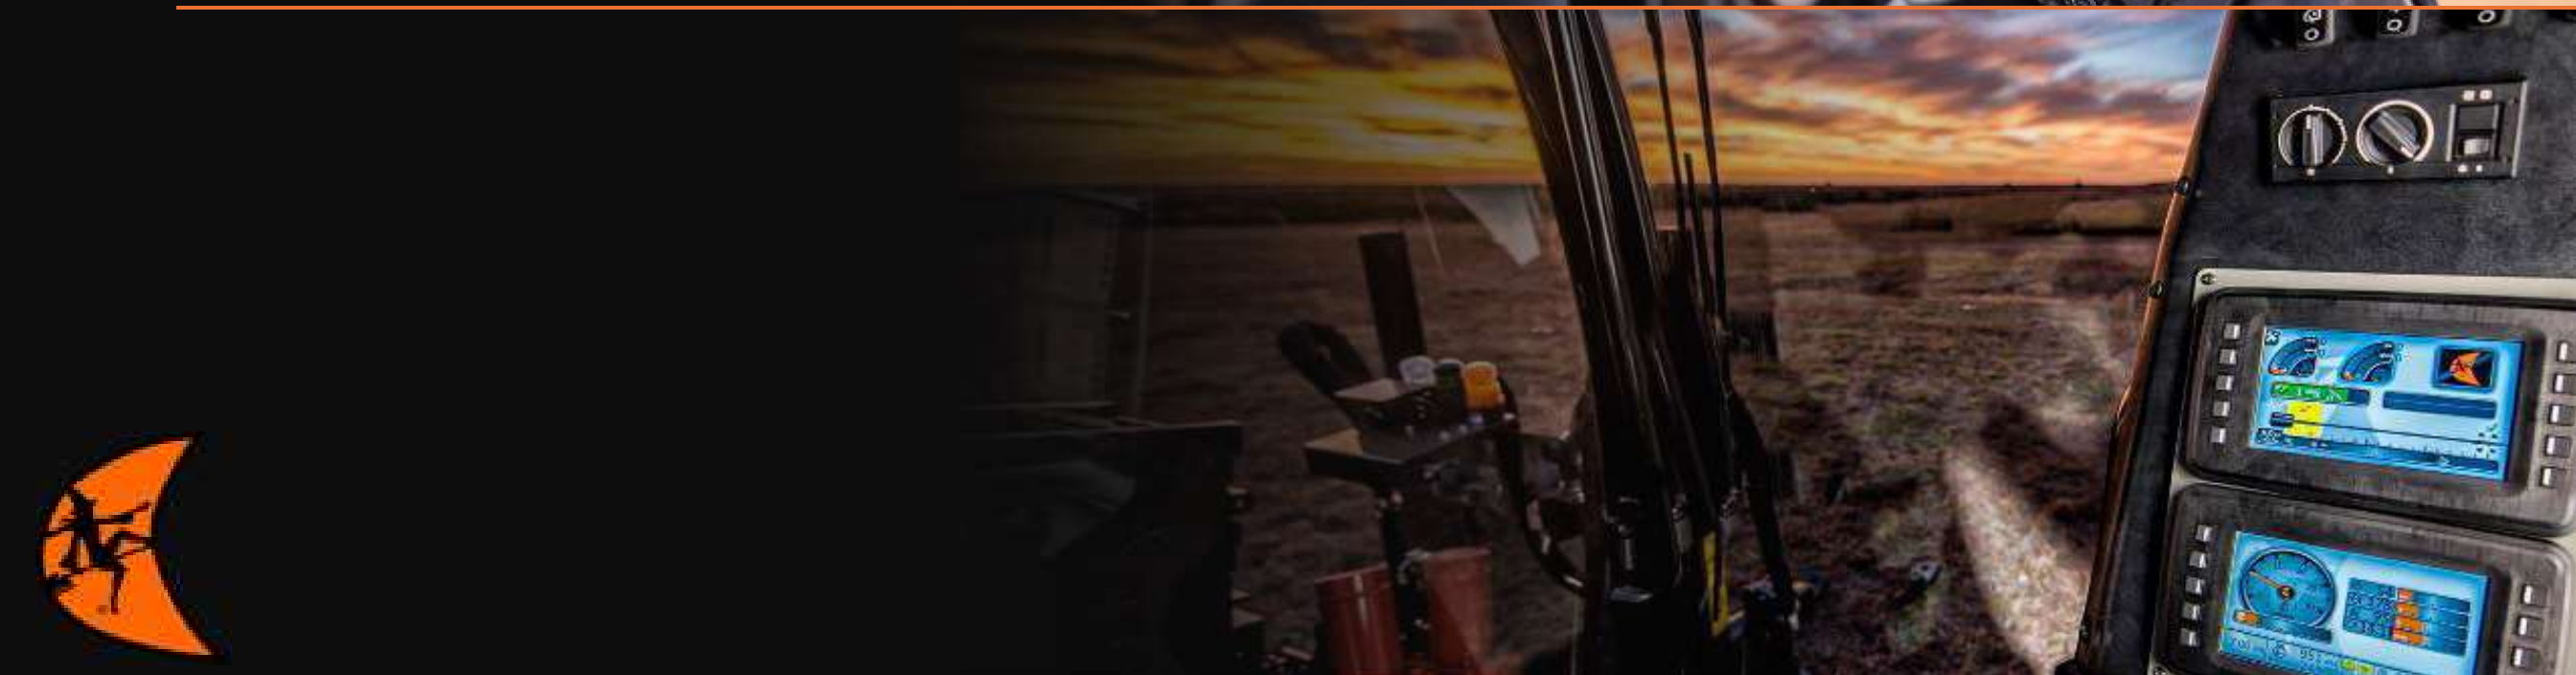

Updating HDD Guidance Displays-USB

- **Standalone C7(Mag Mount Option)**
 - Download files and update instructions-
<https://www.subsite.com/software/software-updates/>
 - Use appropriate Harnesses
 - IFM harness (215-10078) or (215-10095)
 - One USB drive
 - Display Software files
 - Maximatecc (222-2661)
 - 2 USB drives
 - Display reset
 - Display software files
 - **Contact Subsite Product support for step-by-step instructions**
 - **1(800)846-2713**
 - **Option 1**
- **Integrated C7 / Engine display**
 - Update using DWTools application or Download USB drives from DW Display portal.
 - DWTools App - ****Recommended option****
 - **This option gives you the latest and greatest every time it pings the server. Also, walks you through the process while doing it.**
 - Use an iPhone and the appropriate service tools to update engine display to latest software version
 - DWTools Display Portal
 - Download USB with appropriate engine display version.
 - Use marked USB port under the display to download software to machine.
 - **NOTE: Maximatecc is Engine display v1**
IFM is Engine display v2
 - **Contact Ditch Witch Product Support for step-by step app instructions**
 - **1(800)433-6652**
 - **Option 1**

DWTools Portal Navigation

Integrated Engine Display Software

- Login to Dealer central - <https://dealer.ditchwitch.com/>
 - Most if not all service techs should have access to the following steps.
 - **This is not a sales tool as you need to have service training, we don't want to accidentally load the wrong software on the wrong display.**
- Use the service tab to navigate to DW Tools portal.- <https://jtauto4.ditchwitch.com/>
- Login to Display Config Download
 - Show config Files
 - Fill in the blanks for specific controller
 - DWTrenchless
 - Machine type (based of unit serial number and engine type)
 - Contact DW product support if you are unsure what to select.
 - **EX: JT40 is different software from a JT40A**
 - Engine Display version-**Contains both DW and SS software.**
 - **V1 is Maximatecc**
 - **V2 is IFM**
 - Download the latest files by date.

****Format USB drive to a FAT32 and 4096bytes before downloading software****

****Every download is machine specific. Do not use the same software on multiple machines. Each machine software needs to be downloaded before installing****

*****Maximatecc displays will still need the Display Checker and Reset USB*****

*****IFM display- Press and hold the top right button for 13sec to get to the update software screen*****

Ditch Witch® | DEALER CENTRAL





Home



Parts



Service



Equipment



Application &
Reports



C4C

Service

- [Service Management](#)
- [Warranty Details](#)
- [Engine Information](#)
- [Checklists](#)
- [Orange Armor](#)
- [Orange Intel](#)
- [Product Support](#)

Tools

Forms

- [Dealer Locator](#)
- [Ditch Witch University](#)
- [Dealer Marketing](#)
- [Dealer Marketing Platform](#)
- [Ditchwitch.com](#)
- [Subsite Marketing](#)
- [Underground Outfitters](#)
- [Quality Hotline](#)
- [Help](#)
- [Orange Intel](#)
- [HDD Advisor](#)
- [Parts Lookup](#)

SERVICE MANAGEMENT

Labor Info

- [Labor Time Guide](#)
- [Ditch Witch Labor Rate Change Form](#)
- [Flat Rate Development Guide](#)

Tools

- [CMW Special Tools](#)
- [Fabrication Tool](#)
- [General Shop Tool](#)
- [Instructions for Loading DW Displays](#)
- [Service Truck Tool](#)
- [Technician's Tools](#)
- [AA HDD-ABM-MUD Tools](#)
- [Trencor Trencor-Miner Tools](#)
- [DW Tools Portal](#)
- [DW Tools User Guide](#)

Release Notes



JT32 CAN Main V4 Firmware Release - V1.0.22
Date: 5/20/2024

Greetings!

The newer version of the software for the AT\JT 32 Main controller is available in the DW tools.

Release summary for the V 1.0.22:

- Gripper relaxed issue resolved in the pipe remove/add automation

Thanks,
DW service tool



JT32 CAN Pipe V4 Firmware Release - V1.0.18
Date: 5/20/2024

Greetings!

The newer version of the software for the AT\JT 32 Pipe controller is available in the DW tools.

Logged In Corporate Users

User Name	E-mail
EquipPrep2523	equipprep@ditchwitch.
jt24line	JT24LINE@DITCHWITC
ricky1	rharbour@subsite.com
mbennett	michelle.bennett@subs
Blake6	blake.cook@ditchwitch

Dealer Users

Last Login	User
2/19/2025 11:51:43 AM	Jeff Robards jrobards@di 4271
2/21/2025 12:41:26 PM	Dan Daneker 6096944749
2/5/2025 9:34:08 AM	ROBERT DIC RDICKERSON 5172312577



Config Files

Support Files

Controller Group Type:

Select Controller Group Type...

BTLink

Can-D

CompactUtility

DWTrenchless

ESID

FieldKits

Supplemental Device

Config Files

Support Files

Controller Group Type:
DWTrenchless

Controller Group:

Select Controller Group...

JT120 V1.0

JT120 HDD

JT21 V1.0

JT24 V1.0

JT32 V1.0

JT40 V1.0

JT40A V1.0

JT40 Stage V

Config Files

Support Files

DWTrenchless

JT32 V1.0

Controller:

Select Controller...

Engine Display V1

DID:

Machine Display V1

DID: 247

Engine Display V2

DID:

Machine Display V2

DID: 247

V1 = Maximatecc Display

V2 = IFM Display



Config Files

Support Files

Controller Group Type:
DWTrenchless

Controller Group:
JT32 V1.0

Controller:
Engine Display V2

Downloads

	Type	Version	Notes	File Name	Created On	Last Updated By
DOWNLOAD	CF	V8.0.0	Latest Stable Version. Support Marksmen feature	PROD_REL_IFM_JTXX_ENGINE_DISP_V_8_0.exe	3/27/2024 9:29:53 AM	Philip Mills
DOWNLOAD	CF	1.0.0		IFM_Commander7.exe	1/26/2023 1:52:04 PM	Philip Mills



Download Displays

File Type

☒ Show Config Files

☐ Show Support Files

Association

☒ For The Specific Controller:

DWTrenchless



JT32 V1.0



Engine Display V2



☐ Available Globally to Controllers of Type:

Downloads

	Type	Version	Notes	File Name	Cl
Download	ConfigFile	V8.0.0	Latest Stable Version. Support Marksmen feature	PROD_REL_IFM_JTXX_ENGINE_DISP_V_8_0.exe	3/
Download	ConfigFile	1.0.0		IFM_Commander7.exe	1/